


Manual new steering rod holder
Urban Arrow Family with **Daum**
first generation UA:

1. Unscrew the old holder.
- 2/3. Use drill 6mm to make the outermost holes bigger.
4. Bend one side in advance.
5. Bend both sides in advance.
6. Mount the side with one hole on the outside of the bike.
7. Pull it over the steering rod.
8. Fold it again with some pressure.
9. Bend it around the steering rod.
10. Place the other bolt on the outermost hole.
11. Tighten up the bolts.
12. Finished is your new steering rod holder!

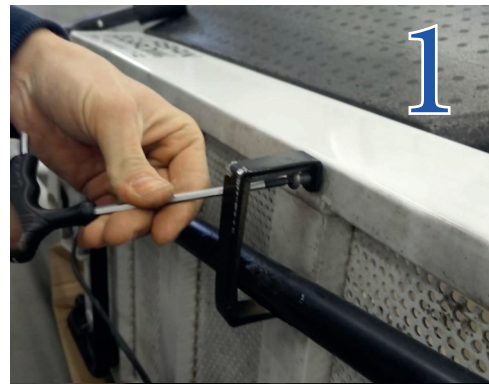

Manual new steering rod holder
Urban Arrow Family with **Bosch**
second and third generation UA:

1. Unscrew the old holder.
2. Take the side with one hole.
3. Bend this side in advance.
4. Mount the side with one hole on the outside of the bike.
5. Put the bolt in the innermost or second hole.
6. Pull it over the steering rod.
7. Fasten the second bolt.
8. Tighten up the bolts.
9. Finished is your new steering rod holder!

